


Installation guidelines for Swift-Dock-Ultra-Power


Applicable for both spring contact and contact land side

Fitting

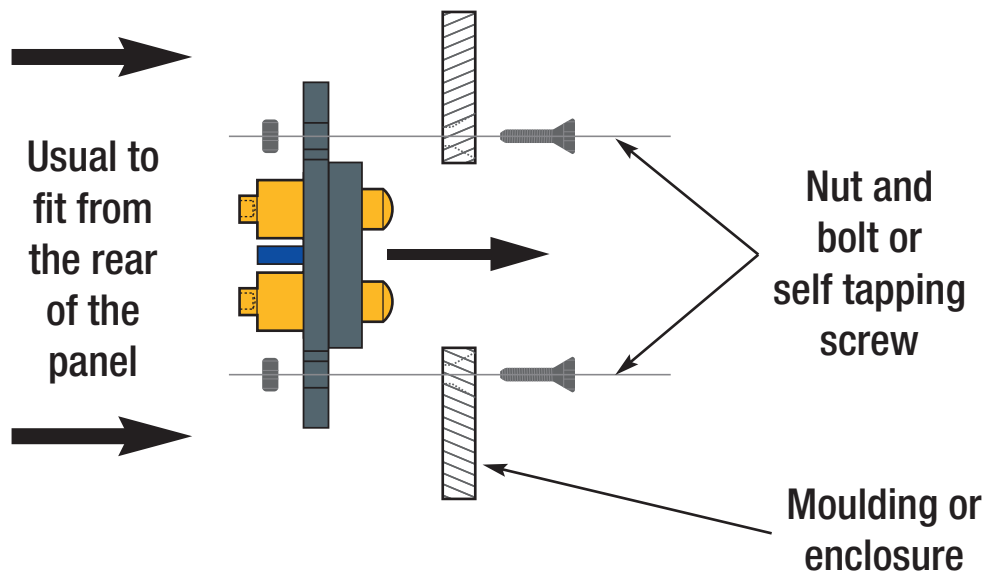

Part No. SD-ULTRA-2-SC

Soldering

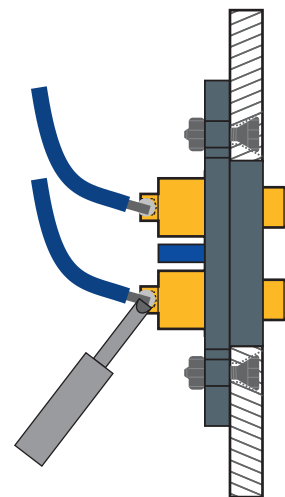

- Keep soldering time to a minimum to avoid melting the plastic moulding that surrounds the spring contact/land
- Twist conductor strands together and tin them. Place wire in solder pot and fill with solder quickly in one operation. Gold plating will allow solder to take very quickly
- Use cable types suitable for the current load
- Can have solder fitment to your PCB

Part No. SD-ULTRA-2-SC