


Installation guidelines for CC-MEDIUM-2 Applicable for both spring contact and contact land side

Fitting Rear-Fitment Front-Fitment M2.5 countersunk Round-head or self tapping screw or cheese-head bolt bolt & nut Moulding or enclosure 7.0 14.0 Recommended front & rear Protective cover available for fitment cutout front fitment in this size

Soldering

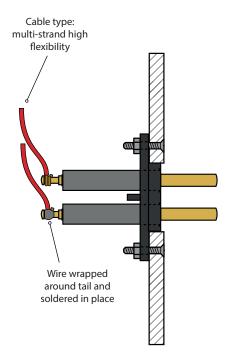

- Keep soldering time to a minimum on land side to avoid melting the plastic moulding that surrounds the land
- Position wire perpendicular to pin
- Wrap wire around inside of tail and twist tight. Solder quickly in one operation

Gold plating will allow solder to take very quickly